 


Smart Pet Water Dispenser

User Guide(W03)

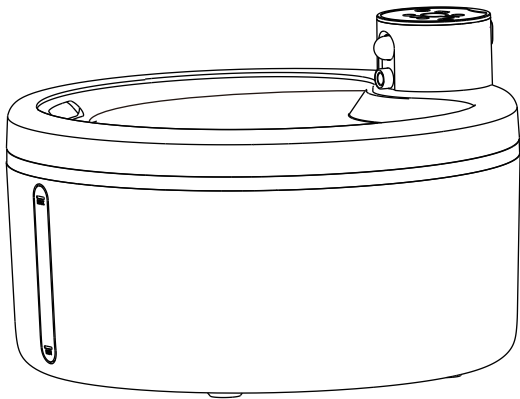


Thank you for choosing our product. We hope that our product will bring you a pleasant experience. Please make sure to read the instruction manual carefully Before using this product.

Caution:


1. This product contains a high-capacity battery. Never place the product (main unit) in a high-temperature disinfection machine or disinfection cabinet for sterilization at high temperatures.
2. Regularly clean the product with environmentally friendly cleaning agents to prevent the growth of bacteria.
3. The main unit is strictly prohibited from being immersed in water. Damage caused by soaking is not covered under the free .
- 4: Use a compliant adapter for charging. Improper adapters may not charge or even damage the product.
- 5: When cleaning the water pump, carefully pry open the back cover with tools, clean with a soft brush, and then reattach the back cover securely.
- 6: Place the product on a flat surface during use. Do not tilt the product to prevent liquid spillage or tipping, which may cause other damages.

Installation Instructions:


1. Take out the filter cartridge, rinse it with clean water for 2 minutes to remove fine particles of activated carbon, then put it into the groove under the upper shell and close the lid.

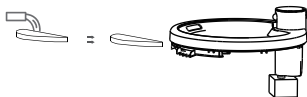


-
2. Take out the water tank, clean it before first using, then fill it with an appropriate amount of cleansing water. The water level should not be too high to avoid overflow.

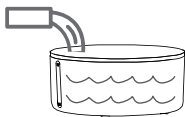

3. Take out the main unit, it is recommended to charge it before the first using ,orcharging it while using.

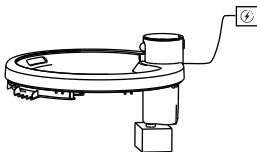

4.Put the main unit onto the tank, ensuring the water pump is fully submerged in water. Then, press and hold the button 1.5s seconds to turn on the power, it will start to sense mode. If the power is turned on before immersing the pump in water, the water output may decrease or stop due to air trapped inside. In such cases, wait for the current water output to complete, and the next water output will return to normal. Alternatively, you can restore it by turning off the power and turning it back on.

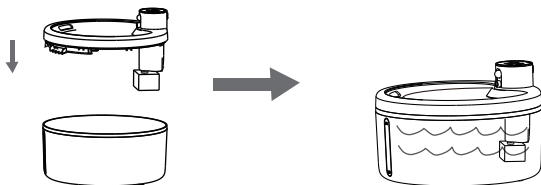


Drawing Diagram:

Stainless Steel
Water Tray



Water Outlet

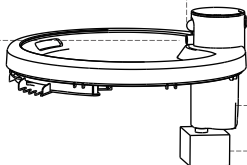

Infrared Sensor

Power Supply Jack

Storage Tray

Battery

Water Pump


Filter Element



Filter Tray




Water Level Window

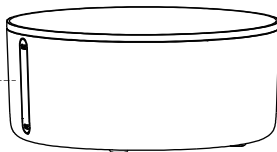


Water Tank

Accessories List:

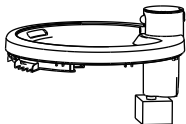

Upper Cover

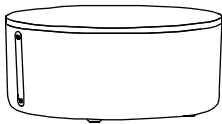

Water Tank



Filter Cartridge




Charging Cable



Stainless Steel Water Tray



brush

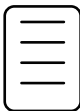


Operation Instructions

Operating Instructions:

-  1: Power On: Press and hold the button for **1.5s** seconds to turn on this machine in the power-off status.
-  2: Power Off: Press and hold the button for **1.5s** seconds to turn off this machine in the power-on status
- 3: Mode Selection: After power on, the system defaults to the sense mode, press once to switch mode. The continuous output mode can only be activated while the device is charging
-  Mode1- sense mode :When the pet is within 1.5 meters in front of the machine, the IR sensor will be triggered, causing the machine to dispense water for 15 seconds.
-  Mode2- Timing mode : In this mode, water is automatically dispensed for 15 seconds every 30 minutes .
-  Mode3- Continuous Water Dispensing: This mode needs to be activated by inserting the charging cable for charging. When in charging status, switching to the continuous water dispensing mode will keep the water pump running continuously. Note that power consumption increases in this mode.
-  4: When the water volume is insufficient, the yellow led will flashes, clean water should be added promptly after clean the tank and pump.
-  5: When the battery is low, the red LED flashes. Please charge it in time

Status Indicators:

- 1: Sense Mode indicator (Green)
- 2: Timed Mode indicator (Green)
- 3: Continuous Water Dispensing Mode (Green)
- 4: Charging indicator--(Green flash)
Low Battery Indicator--(Red flash)
Fully charged: Green light steady on
- 5: Water Shortage Indicator: Yellow flash

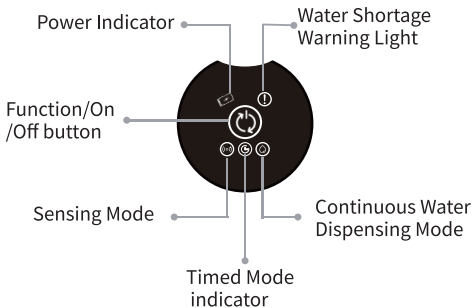

Routine Maintenance:

1: To ensure clean water quality, it is recommended to replace the filter once 1-2 Week.

2: Before adding water each time, it is recommended to pour out any remaining water and clean any dirty areas.

3: Clean the water pump once 1-2 Week. to effectively prolong its lifespan and inhibit bacterial growth.

4: Only use soft cloth to clean the main unit, and do not immerse the main unit in water to clean.

Eight: Specifications

Product Name:	Smart Pet Water Fountain
Model:	W03
Power Input:	DC5V 1A
Battery Capacity:	4000mAh
Dimensions:	204*204*140mm
Volume:	2.5L
Rated Power:	≤1W
Material:	ABS+304 Stainless
Net Weight:	580g

Q&A and Troubleshooting:

Q: How often should the filter be replaced?

A: It depends on the water quality and the drinking habits of your pet. You are advised to replace the filter once 1-2 Week.

Q: How often should the filter be replaced?

A: You are advised to clean the product at least every two weeks; if you are in any area with hard water (such water tends to produce scale on the inner wall of the water tank), please clean the product once a week.

Q: What's the power consumption of the product?

A: The product uses an ultra-low water pump with an average power of 1W; its power consumption is 1Kwh only after working for one month continuously, namely its annual power consumption is about 13Kwh.

Q: When should I add water?

A: The product is equipped with the function of reminding users of water shortage and power outage. When the red indicator is on, the water is insufficient. In such case, please add clean water promptly. The red indicator is off and the blue indicator is on after you add some water.

Q: When the blue indicator is on, what should I do if the water is not flowing or the output is small?

A: You need to clean the hair and impurities on the pump impeller and filter cotton completely as the methods specified. After that, you need to reinstall the product for normal operation.

Q: What to do if the water dispenser stops working?

A: Contact our team for troubleshooting assistance. If the pump has issues, try cleaning/replacing the filter first. Need help? Share photos via Amazon Message for faster service.

After-sales Service:

Thank you for your patronage. If you have to contact us.

